



Emitter size: 30x15x86 mm

PRODUCT INFORMATION

The product adopts digital IC coding, wireless studying and wireless emission/receiving technology. It adopts DIP switch coding. And when out factory, the emitter has been studied corresponding to receiver. It has stable performance, good appearance, simple operation and long use life.

SPECIFICATIONS

Power source: Emitter: 12V/DC
Receiver: 220-240V/AC
Power frequency: 50Hz

Frequency: 433MHz
Distance: ≥30m(wide place)
Rated load: 1200W Max.

WIRELESS STUDYING METHOD

Attention: when out factory, the emitter has been studied corresponding to receiver. When you need re-study the emitter if necessary, you can according to following method:

- study emitter's No.1 key: press and hold the button of the No.1 receiver, the receiver's LED light red, and after approximately 2 seconds its LED turn green, here loosen the button, and then press the emitter's No.1 key for 2seconds, the receiver's LED turn red, the No.1 key studying is finished;
- study emitter's No.2 key: press and hold the button of the No.2 receiver, the receiver's LED light red, and after approximately 2 seconds its LED turn green, here loosen the button, and then press the emitter's No.2 key for 2seconds, the receiver's LED turn red, the No.2 key studying is finished;
- study emitter's No.3 key: press and hold the button of the No.3 receiver, the receiver's LED light red, and after approximately 2 seconds its LED turn green, here loosen the button, and then press the emitter's No.3 key for 2seconds, the receiver's LED turn red, the No.3 key studying is finished;

TEST AND USAGE

1. Before using, open the battery lid of the emitter and fix DC12V battery into emitter;
2. Plug in three receivers respectively, the LED on every receiver should light green;
3. Press the emitter's No.1 key, the No.1 receiver should be on and the LED turn red, press emitter's No.1 key once again, the No.1 receiver should shut off power and the LED resume green;
4. Press the emitter's No.2 key, the No.2 receiver should be on and the LED turn red, press emitter's No.2 key once again, the No.2 receiver should shut off power and the LED resume green;
5. Press the emitter's No.3 key, the No.3 receiver should be on and the LED turn red, press emitter's No.3 key once again, the No.3 receiver should shut off power and the LED resume green;
6. Press ALL OFF key on emitter, all receiver shut off power, and the receiver's LEDs resume green.
7. You can also press the button (ON/OFF) on receiver to turn on or off receiver;
8. If test is normal, button the battery lid of the emitter. Connect the receiver with load and then you can use it.

Please attention:

1. the distance between the three receivers can not be too short, otherwise that will affect the remote control distance, the distance between receivers should beyond 3m.
2. You'd better not use the power socket with power LED avoiding influencing its receiving distance.