


LCD Thermometer & Pen Holder

LCD-Thermometer und Stifthalter

hama[®]
Hama GmbH & Co KG
D-86652 Monheim
www.hama.com

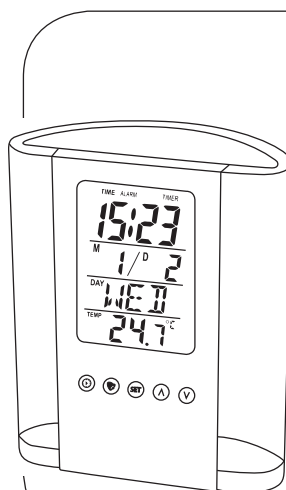


Operating Instructions
Bedienungsanleitung
Mode d'emploi
Руководство по эксплуатации
Istruzioni per l'uso
Gebruiksaanwijzing
Οδηγίες χρήσης
Instrukcja obsługi
Manual de instruções
Kullanma kılavuzu
Manual de utilizare
Bruksanvisning
Pistokelaturi

GB
D
F
RUS
I
NL
GR
PL
P
TR
RO
S
FIN

All listed brands are trademarks of the corresponding companies. Errors and omissions excepted, and subject to technical changes. Our general terms of delivery and payment are applied.

00075299/12.13

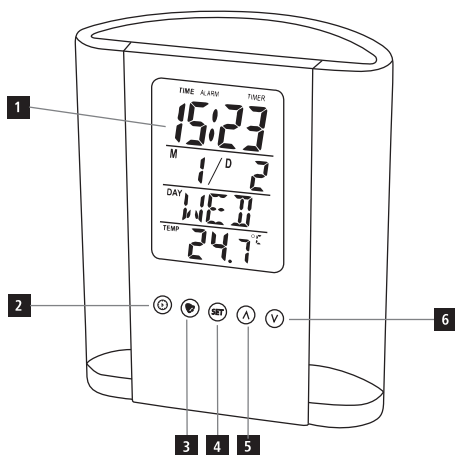

GB Operating instruction

Controls and Displays

1. Display
2. Mode button
3. Alarm button
4. Set button
5. Up button (▲)
6. Down button (▼)

Thank you for choosing a Hama product.

Take your time and read the following instructions and information completely. Keep these operating instructions in a safe place for future reference.

1. Explanation of Warning Symbols and Notes



Warning

This symbol is used to indicate safety instructions or to draw your attention to specific hazards and risks.



Note

This symbol is used to indicate additional information or important notes.

2. Package Contents

- LCD thermometer with pen holder
- 2 LR1130 button cell batteries, 1.5 V (already inserted)
- These operating instructions

3. Safety Notes

- The product is intended for private, non-commercial use only.
- Protect the product from dirt, moisture and overheating and use it in dry rooms only.
- Do not drop the product and do not expose it to any major shocks.
- Do not open the device or continue to operate it if it becomes damaged.
- As with all electrical devices, this device should be kept out of the reach of children.
- Dispose of packaging material immediately according to locally applicable regulations.
- Do not modify the device in any way. Doing so voids the warranty.



Warning

- Always observe the correct polarity (+ and - markings) when installing batteries. The polarity is marked on all batteries.
- Do not mix old and new batteries or batteries of a different type or make.
- Do not short-circuit batteries.
- Do not charge batteries.
- Do not throw batteries in a fire.
- Do not allow children to change batteries without supervision.
- Remove the batteries from products that are not being used for an extended period (unless these are being kept ready for an emergency).

4. Functions

Normal time mode

Displays the time, date, weekday and temperature.

Alarm and snooze function

Set a daily alarm and snooze function, select an alarm sound.

Birthday reminder

Alarm function for a specific day in a specific year and at a specific time. The alarm plays a popular birthday song at the specified time. This alarm melody cannot be changed.

Timer

Classic count-down alarm (egg timer) with a time range from 23:59 to 00:01. After the specified time has elapsed, an alarm tone goes off.

Temperature function

Automatically measures and displays the ambient temperature.

Music function

In normal time mode, press the ▼ button to play music or to stop it.

5. Installation and Settings

Note

- After removal of the battery's contact breaker (at the bottom of the thermometer), the normal time is displayed in 12-hour format and a melody signals that the product is ready for use.
- The function modes are organized as follows: Normal time mode → 12 h/24 h format/time/date → Alarm and snooze function → Birthday reminder → Timer → Normal time mode
- When the item flashes, it means that the item selected can be set.

5.1. Setting 12 h/24 h Format, the Time, and the Date

- In normal time mode, press the **MODE** button once to switch between 12 h and 24 h format.
- Use the **▲** and **▼** buttons to select the format you want to use.
- Then press the **SET** button to set the time using the **▲** and **▼** buttons. The time is set beginning with the hour in the format that was previously selected, 12 or 24 hour time. The hour flashes in the display.
- Next press the **SET** button to set the minutes using the **▲** and **▼** buttons. The minutes flash in the display.
- Next press the **SET** button to set the current year using the **▲** and **▼** buttons. The year flashes in the display.
- Next press the **SET** button to set the current month using the **▲** and **▼** buttons. The month (**M**) flashes in the display.
- Next press the **SET** button to set the current day using the **▲** and **▼** buttons. The day (**D**) flashes in the display.
- After making the settings, press the **MODE** button four times to return to normal time mode.

Note

- In the course of setting the date, the day of the week – Monday (MON) to Sunday (SUN) – is set automatically.
- If no button is pressed for one minute while the settings are being made, the device automatically switches back to normal time mode. The settings that were made up to that point are not saved!

5.2 Alarm and Snooze Function

- In normal mode, press the **MODE** button two times or press the **ALARM** button directly to switch to alarm mode.
- In alarm mode, press the **SET** button and use the **▲** and **▼** buttons to set the hour for the alarm.
- Next press the **SET** button to set the minutes using the **▲** and **▼** buttons.
- Then press the **SET** button to select an alarm melody from the melodies 1 through 9 using the **▲** and **▼** buttons.
- After making all the settings, press the **MODE** button three times to return to normal time mode.

Note – Alarm function

- The alarm goes off every day at the set time.
- The active alarm function is indicated by the word 'Alarm' in the display.
- To completely deactivate the alarm function, press the **ALARM** button in normal time mode to switch to alarm mode. Press the **SET** button five times until you only see three dashes in the display (---).

When the alarm function is active, press the **▲** button in normal time mode to activate or deactivate the snooze function.

Note – Snooze function

- If the alarm function is activated without the snooze function, the alarm will only go off at the set time for one minute.
- Press any button to stop the alarm, or to trigger this snooze function if it is activated.
- If the snooze function is activated, the alarm will go off several times, each time for one minute.
- The snooze function is only available when an alarm is set.

5.3 Birthday Reminder

- Press the **MODE** button three times in normal time mode to go to the birthday reminder settings.
- Now press the **SET** button to make the settings, and set the time and date using the **▲** and **▼** buttons.

- Press the **SET** button to switch to the different positions:
→ Hour → Second → Year → Month → Day
- Press the **SET** button again to save and exit the settings.

Note – Birthday reminder

- If no button is pressed for one minute while the settings are being made, the device automatically switches back to normal time mode.
- The reminder plays a popular birthday song at the specified time. This alarm melody cannot be changed and continues to play for 5 minutes.

5.4 Timer Function

- Press the **MODE** button four times in normal time mode to go to the timer function settings.
- Now press the **SET** button to make the timer settings, and set the hour using the **▲** and **▼** buttons.
- Press the **SET** button to switch to the minute settings.
- Press the **SET** button again to start the count-down timer.

Note – Count-down timer

- If no button is pressed for one minute while the timer settings are being made, the device automatically switches back to normal time mode.
- Once the count-down finishes, the alarm signal goes off for one minute.
- You can press the alarm button to turn off the alarm signal.

5.5 Temperature Function

Temperature measurement starts automatically as soon as the batteries are inserted. The display shows the current ambient temperature.

- In normal time mode, press the **SET** button to set Celsius or Fahrenheit as the unit of measurement.

5.6 Music Function

- In normal time mode, press the **▼** button to activate the music function.
- The activated music function is indicated by a symbol in the display. 7 popular melodies automatically play on repeat.
- Once they are playing, you can press the **▼** button to deactivate the music function.

6 Care and Maintenance

- Only clean this product with a slightly damp, lint-free cloth and do not use aggressive cleaning agents.

7. Warranty Disclaimer

Hama GmbH & Co. KG assumes no liability and provides no warranty for damage resulting from improper installation/mounting, improper use of the product or from failure to observe the operating instructions and/or safety notes.

8. Service and Support

Please contact Hama Product Consulting if you have any questions about this product.
Hotline: +49 9091 502-115 (German/English)
Further support information can be found here:
www.hama.com

9. Recycling Information

Note on environmental protection:



After the implementation of the European Directive 2002/96/EU and 2006/66/EU in the national legal system, the following applies: Electric and electronic devices as well as batteries must not be disposed of with household waste. Consumers are obliged by law to return electrical and electronic devices as well as batteries at the end of their service lives to the public collecting points set up for this purpose or point of sale. Details to this are defined by the national law of the respective country. This symbol on the product, the instruction manual or the package indicates that a product is subject to these regulations. By recycling, reusing the materials or other forms of utilising old devices/Batteries, you are making an important contribution to protecting our environment.